

PORTACOOOL®

BLOWER ASSEMBLY KIT REPLACEMENT MANUAL

WARNING!

Disconnect Portacool from electrical source before servicing.



Models: PACA05001A1 and PACA07001A1

Note: Follow QR code for detailed video instructions for Blower replacement.

Before Beginning:

- Move unit to safe work environment.
- Position Portacool with plenty of working room on all sides.
- Disconnect Portacool from electrical and water supplies.

Tools Needed:

- Drill Driver with 1/4- and 5/16- inch sockets.
- Gloves
- Safety Glasses

Steps:

1. Remove 2X Blower Screws.
2. Remove Cord Wrap.
3. Remove Manual Water Fill Door.
4. Lay the unit on its back for steps 5-9.
5. Remove Fan Louver Shroud. Unplug the Shroud connector from the Controls.
6. Remove Media Shroud and Media.
7. Unfasten 2X Screws and remove Water Distribution Bonnet.
8. Disconnect the Blower Motor connector from the Controls. Remove Blower Housing.
9. Install new Blower Housing and reconnect Motor to Controls.
10. Re-install all components removed in steps 1-7.

